

**CONNECTS TO OPTIONAL  
LASER DEFUSER EX  
(OTHERWISE DO NOT USE)**


### IGNITION AND GROUND

1. Use a test meter to locate an ignition on source for the Interior Network Module with +12 volts when ignition key is both on and cranking.
2. Connect the black wire to a solid chassis ground using the provided ring terminal and silver self-tapping screw

**FULL INSTALLATION INSTRUCTIONS  
AVAILABLE AT: [K40.COM](http://K40.COM)**

**K40 DAYTIME TECHNICAL SUPPORT  
800-323-5608**

**24 HR. TECHNICAL SUPPORT  
SKY PAGE 1-800-759-7243,  
Enter 55880, press # and follow directions.**

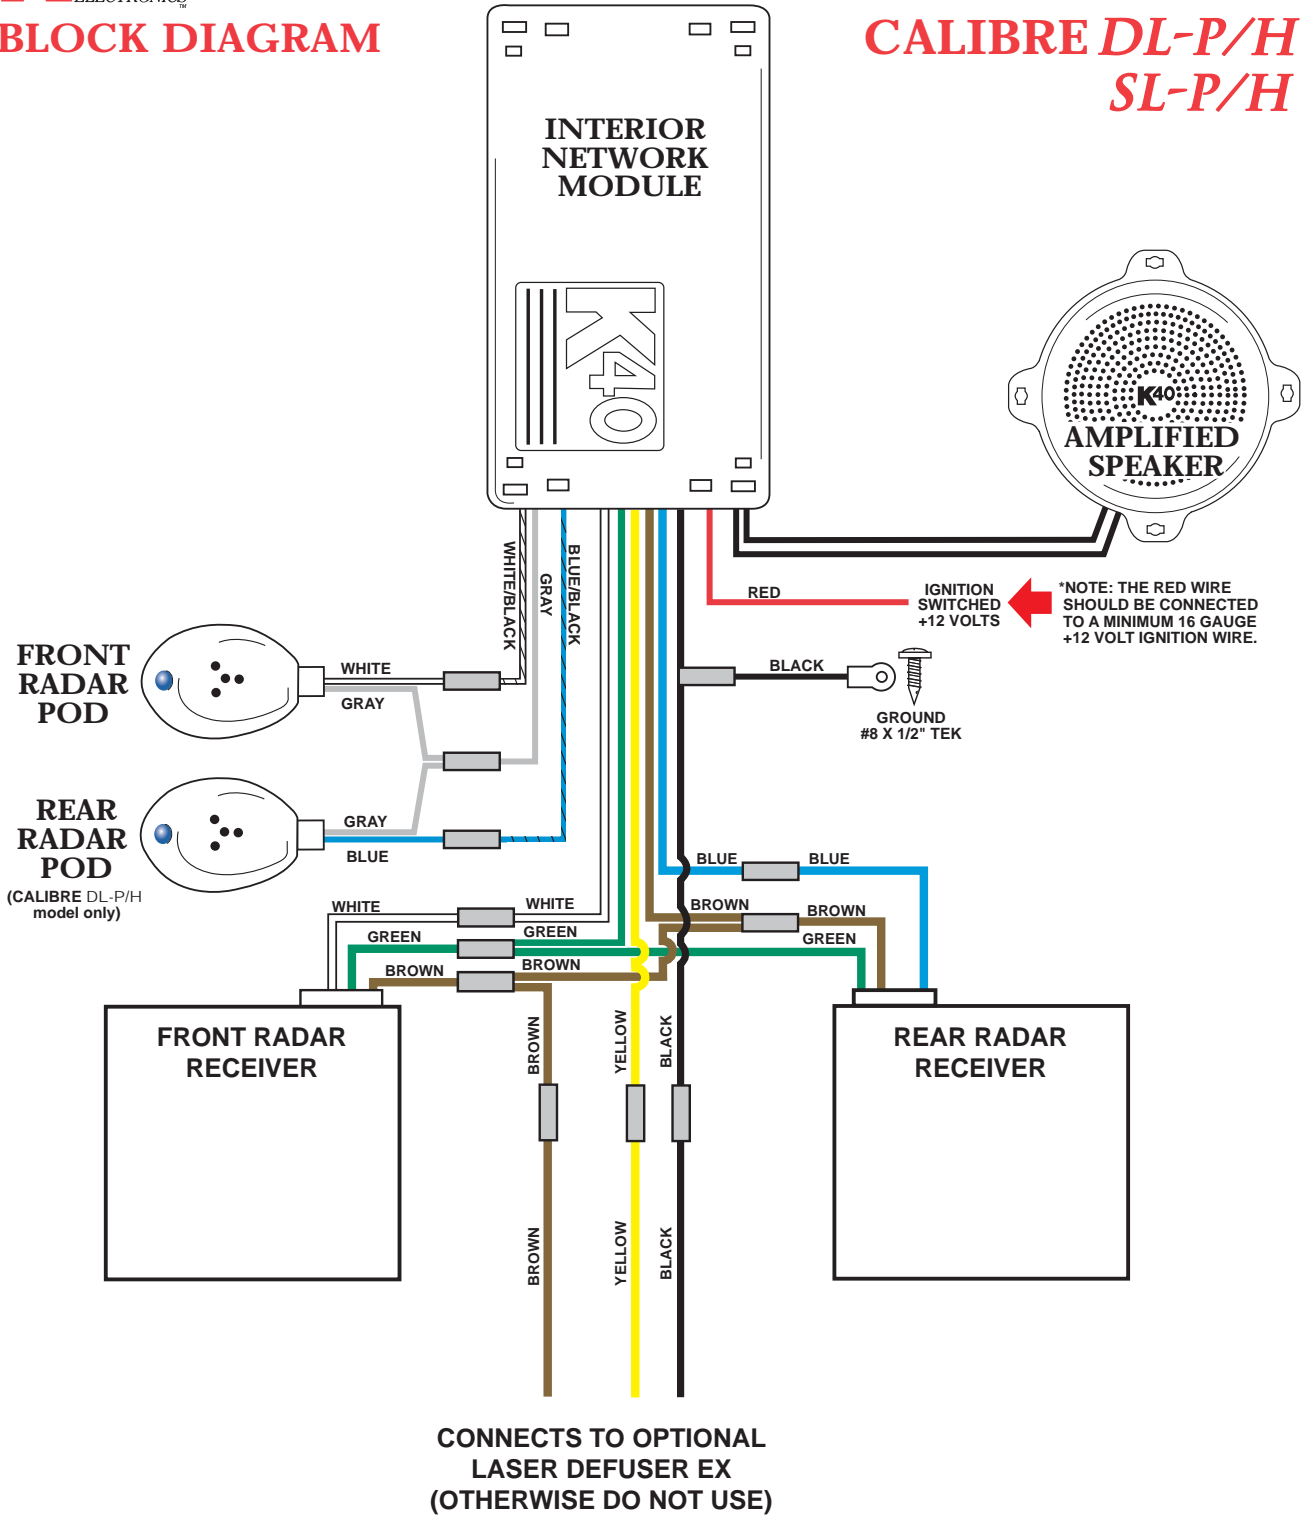

### IGNITION AND GROUND

1. Use a test meter to locate an ignition on source for the Interior Network Module with +12 volts when ignition key is both on and cranking.
2. Connect the black wire to a solid chassis ground using the provided ring terminal and silver self-tapping screw

FULL INSTALLATION INSTRUCTIONS  
AVAILABLE AT: [K40.COM](http://K40.COM)

**K40 DAYTIME TECHNICAL SUPPORT**  
800-323-5608

**24 HR. TECHNICAL SUPPORT**  
SKY PAGE 1-800-759-7243,  
Enter 55880, press # and follow directions.